

CONSOLDE SIDE MOUNT

UNIVERSAL

Installation Instructions

425-5542



WARNING:

Do not install or use this product in any manner which would interfere with any of the vehicles controls, air bags or safety devices. Follow vehicle owner's manual instructions should a dash warning light come on after installation of this desk.Do not install or use this product in any manner which causes a safety hazard for vehicle and/or occupants.

To avoid serious injury do not place this desk or any objects between the air bags and yourself or any passengers. If necessary remove the desk before driving. Store in trunk or other safe place.

We recommend that you do not work on the Jotto Desk while driving! Park safely, then use. Remember, driving safely comes first.

WARNING:

Make sure of and check on a regular basis that all knobs, fastening devices and handles are tight and secure. Repair or replace any faulty or worn parts. All equipment, such as computers, printers, phones, etc. must be safely secured when vehicle is in motion.

DISCLAIMER:

The manufacturer of this product may not be held liable for any accidents, injuries or problems caused by the use or installation of this product.

Specifications subject to change without notice.


INSTALLATION PROCEDURE

READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION



- Position the mounting base to the right height (allow clearance for radio equipment) on the side of the console. With a pencil, mark on the side of the console the corresponding holes that match up with the holes in the base.
- 2. Insert the provided 1/4"-20 bolts with lock washers and black washer from the inside elf the console through the marked holes and screw into the base. Tighten securely with ratchet.
- 3. Place straight arm over the 5/8" end of the telescoping rod. Tighten with ratchet handle.
- 4. Attach desktop to end of articulated swing arm and secure by tightening ratchet handle.

RATCHET CLAMP OPERATION

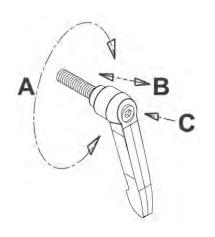

NOTE: Insert the ratchet handle through the unthreaded side of the articulated swing arm and tighten.

Going through threaded side first will not allow

Going through threaded side first will not allow the arm to tighten properly

To adjust, pull handle out (B) and rotate counter clockwise (A), release and tighten. If needed, use 1/8" hex head wrench for adjustment (C)

NOTT: Ratchet handles are spring loaded and can be readjusted to tighten.

REPLACEMENT COMPONENTS





No Holes Base 425-2827



Katchet Handle 425-1273

JOTTO DESK ACCESSORIES

Specifications subject to change without notice.



Pivoting Cell Phone Holder

425-5299

Allows you to tilt your phone independent of the desktop angle. Mounts to side of 10" x 12" Desktop.



USB Light

425-2490

12" flexible wand with blue LED's and rheostat to adjust brightness. Three foot power cord plugs into cigarette lighter.



Kensington® Masterlock®

425-1317

Computer securing system uses Kensington locking system. Fasten security cable to permanent structure in vehicle



Screen Support - A-Mod

Model 450-0449

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the A-MOD Desktop and adjusts in height and tilt angle.



Brace Kit

425-5238

The Brace Kit attaches to the stand providing additional support. It can be adjusted in length and mounts to flat, vertical or angled surfaces.



Screen Support - Acd

425-5999

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the ACD Desktop and adjusts in height and tilt angle.





