

BROTHER 14CC

FACEPLATE

Installation Instructions

425-6544







For use with the...

RJ4030 4" Printer

ORDERING INFORMATION

425-6544 7" Faceplate for Brother RJ4030 4" Printer



Mount the Brother printer faceplate into the bottom of the Jotto Desk console.





Loosen knob to release the printer faceplate from its secure position.

3



Pull up to remove faceplate with printer from console when the paper roll needs changing.

SCAN QR CODE FOR VIDEO



If you have questions or need further assistance please call Technical Support: 1.877.455.6886



