



28" FLOOR PLATE

2018+ FORD F-150 SSV/POLICE RESPONDER | 2017+ FORD F-250
2018+ FORD EXPEDITION SSV

Specification Sheet

425-6501

425-6502




NOTE: If vehicle has 40/20/40 seats: Remove the center seat, unplug 12v power supply, remove OEM mounting brackets on floor board (see picture below) and proceed with install.

If installing in a Police Responder: Remove OEM mounting brackets on floor board (see picture below) and proceed with install.




Remove (2) OEM mounting brackets.

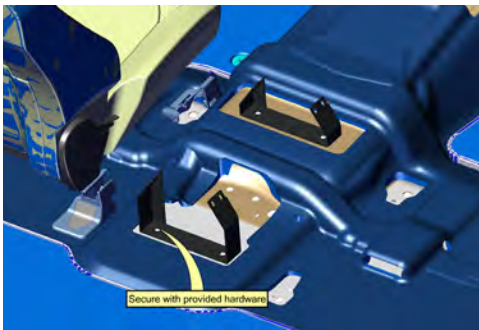

Place front and rear Floor Plate Brackets over hole locations. Secure with provided bolts or OEM hardware.



Lightly secure (8) of the 5/16-18 bolts, washers, and nuts to the Floor Plate Brackets. Slide the Floor Plate in from the rear, aligning the bolts with the side grooves on the Floor Plate side.

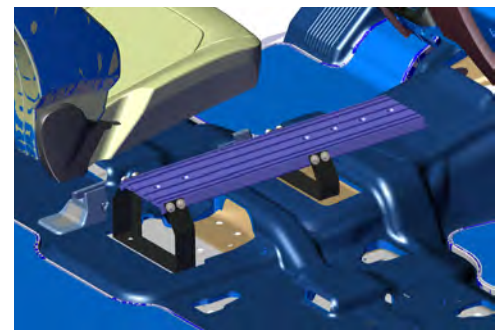

Place the Floor Plate in desired location by sliding forward and back. Secure by tightening the 5/16 nuts.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 2/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0192-00

