



3" DASH MOUNT CONTOUR CONSOLE


2020-2024 FORD PI UTILITY

Installation Instructions


425-6511



REMOVE SCREWS

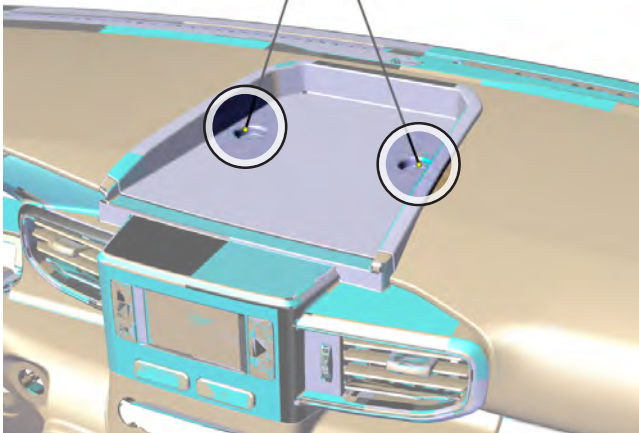

1. Remove the (2) OEM 7 mm screws located at the top of the dash.
2. Gently pry and pop out the trim section.

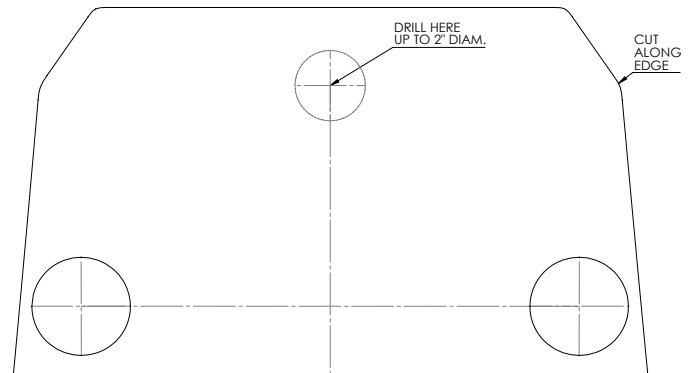

3. Print out the 1:1 Drill template to make a hole for routing the wire harness. (see next page for full size)



4. Use the factory hole to route the harness.
5. If a bigger hole is required, make shallow cuts around the OEM hole with a Dremel.



6. Secure the Console in place by replacing the 7 mm screw.
7. Fully tighten from the access holes located on top of the Console.




209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 9/24

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0174-00



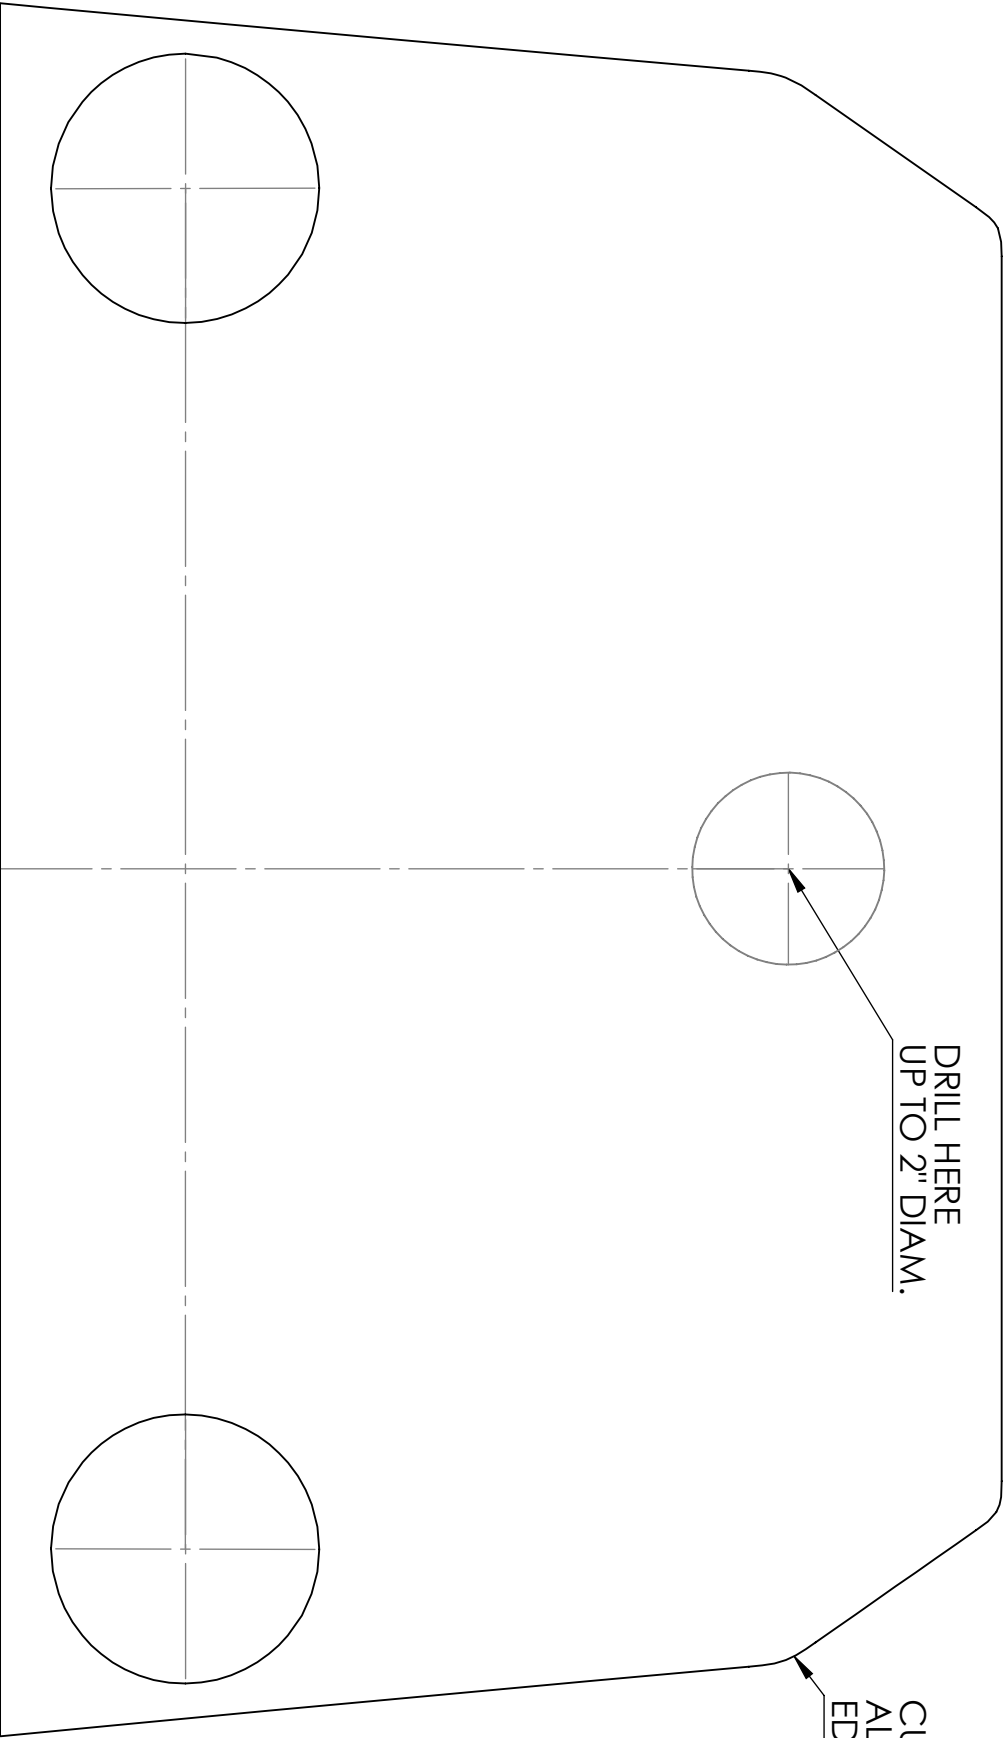

DRILL HERE
UP TO 2" DIAM.

CUT
ALONG
EDGE