



BAR STYLE WINDOW ARMOR

2020+ FORD PI UTILITY

Installation Instructions

475-0848

475-1401




INCLUDES:

- (1) Driver Side Window Armor
- (1) Passenger Side Window Armor

PARTS INCLUDED:

- Hardware Bag

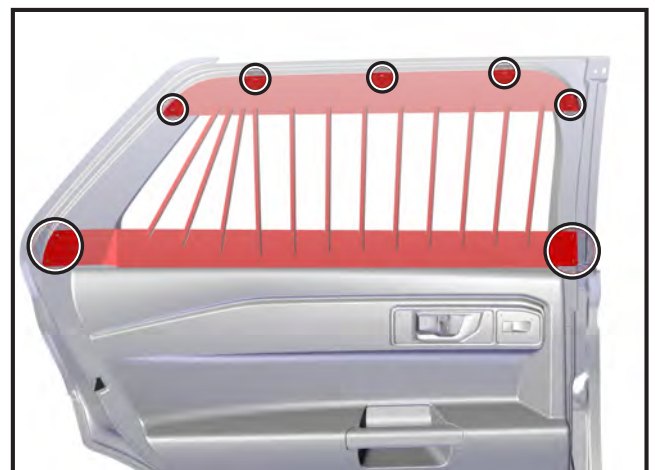

1. Place Vertical Window Armor on top of OEM door panel.
2. The bars are welded on the prisoner side of the mounting plates.
3. There are holes around the perimeter of the Vertical Window Armor that match door frame.
4. Use provided hardware (#8 Phillips Screws) to attach Window Armor to door frame.



DOOR CONTROL COVERS

2020+ FORD PI UTILITY

Installation Instructions




INCLUDES:

- (2) Door Control Covers

PARTS INCLUDED:

- Hardware Bag

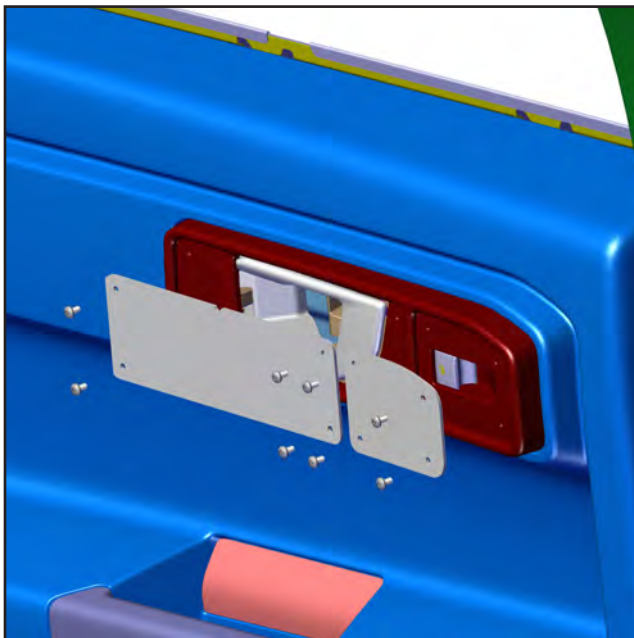

1. Position the Cover Plates over the Door Handle and the Lock.



2. Secure in place with provided hardware.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 2/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0144-00

