

WINDOW ARMOR (SECURE GRID)

CHEVY TAHOE '15-'20

475-0862


Installation Instructions

INCLUDES:

- (1) Driver Side Window Armor
- (1) Passenger Side Window Armor

Parts Included:

- Hardware Bag With Necessary Nuts, Bolts, Etc.

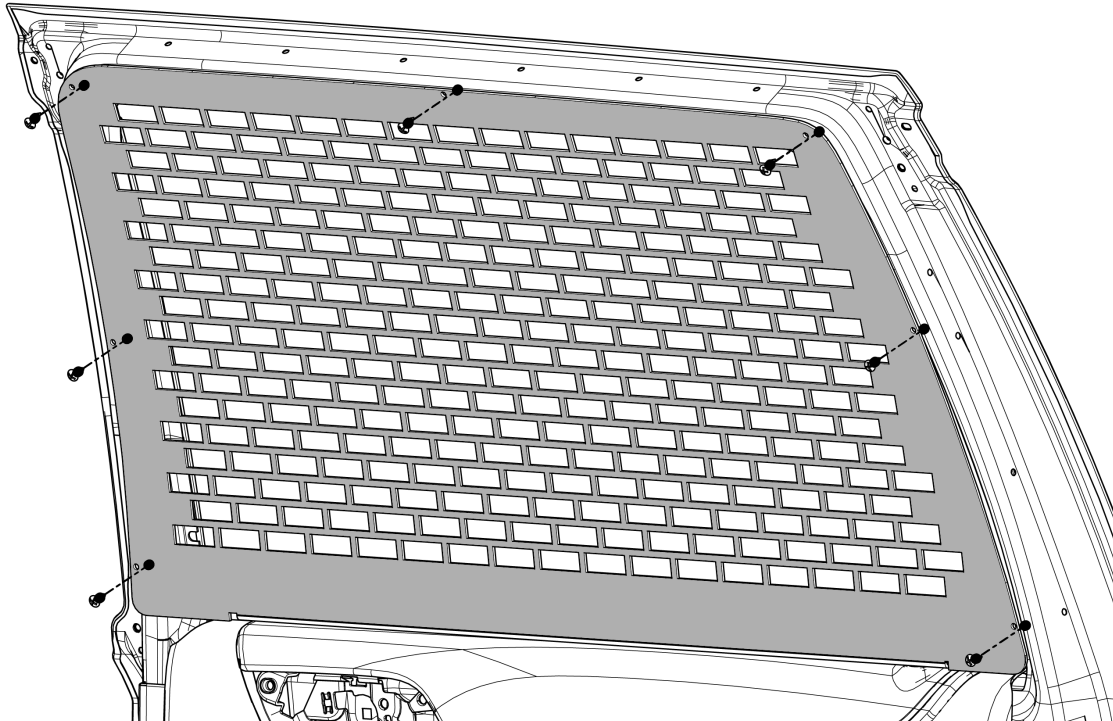

1. Place Secure Grid Window Armor on the door frame.
2. Curve of Secure Grid Window Armor should be away from prisoner area.
3. There are holes around the perimeter of the Secure Grid Window Armor that match the top curve of door frame.
4. Use provided hardware (#8 Phillips Screws) to attach Window Armor to Door Frame.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • www.JottoPublicSafety.com • 9/20

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.