



SPACE CREATOR VEHICLE PARTITION

FEATURING BDRH (BIDIRECTIONAL RECESSED HOUSING)

(U.S. Patent No. 8,690,216)

2015+ DURANGO SSV

Installation Instructions

Space Creator with High Security/High Visibility Window - 475-0965

Space Creator with Full Window w/ Safety Wire Window - 475-0966

Transfer Kit - 475-1936

Before beginning the installation, confirm that you have received all of the parts for your package.
Read the instructions completely before starting installation.



TOOLS NEEDED:

- Ratchet
- 7/16" Socket
- 10 mm Socket
- 18mm Socket


Parts Included:

- Hardware Bag With Necessary Nuts, Bolts, Etc.




DS-

- PS

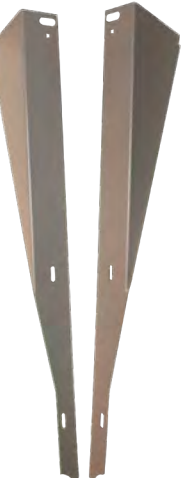

Wings Set

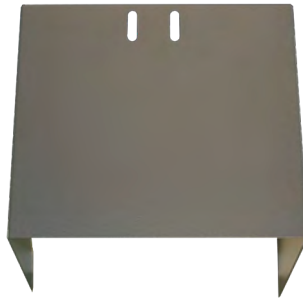

Center HSEP



Bi-Directional Recessed Housing



DS-

- PS

(2) B Pillar Bracket



DS-

- PS

(2) Mounting Foot



ABS Headliner Blank



Pop plastic clips and remove lower B pillar.



Using 9/32 socket remove exposed screw from Upper B pillar trim. Remove Upper B pillar trim.



Use 10mm socket to remove both OEM bolts and grab handle.



Use (1) 10mm OEM bolt to attach B Pillar Bracket to lower hole of grab handle. Reattach upper and lower B Pillar trim.



Move seats completely forward. Use a small flat head screw driver to pry cover off of seat bolt. Remove the rear/outer OEM 18mm seat bolt.



Place Foot Mount Bracket onto seat rail. Replace OEM bolt at this time. Snap cover back onto seat rail. Repeat all previous steps for other side.



Remove and disconnect rear controls from headliner if vehicle has them.



Detach the Rear AC Control Box from component housing. Then reconnect and position back into place.



Install ABS Headliner Blank using the provided (4) black pan head screws.



Install Partition frame into vehicle through DS door and position onto mounting feet.



Lean Partition frame forward and loosely attach B Pillar Brackets to middle hole of frame. Center the partition. Once centered, tighten all hardware at this time.



Loosely attach Center HSEP onto BDRH outside of vehicle using (6) carriage bolts and flange nuts.



Place BDRH with Center HSEP into vehicle. Attach BDRH to Partition Frame using provided carriage bolts and flange nuts. Push carriage bolts in from prisoner side of partition. Tighten all bolts/nuts.



SOLO INSTALL NOTE: Use masking tape over carriage bolts to hold bolt in place while attaching flange nuts from front side of partition.



Install Lower Steel Wing from prisoner side using (3) carriage bolts and flange nuts. Repeat on other side.



Install Upper Poly Wing from officer side using a carriage bolts and flange nuts on the upper and lower hole. Repeat on other side.



Install black caps on all flange nuts.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 10/24

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0071-00

