








GUN RACK - VERTICAL MOUNT TO SINGLE CELL

475-0380 - GR7-AR BLM-SUV | 475-0381 - GR7-870-SUV | 475-0382 - GR7-870-AR BLM-SUV | 475-1130 - GR7-AR SIDEWAYS

Installation Instructions




475-0380 - GR7-AR BLM-SUV

475-0381 - GR7-870-SUV

475-0382 - GR7-870-AR BLM-SUV

1. Insert a button head cap screw into each T-Block, just a few threads. (Pic 1)
2. Place T-Blocks one at a time into the base of Extruded Backbone of Single Cell, through notched out section. Slide T-Block up the channel, finger tighten to hold in place. (Pic 2)
3. Remove the top T-Block button head cap screw and loosely attach lock/bracket. Then remove 2nd T-Block button head cap screw and attach to other half of lock/bracket. Slide into temporary location and finger tighten down screws. (Pic 3) Repeat until all brackets are positioned on Extruded Backbone.
4. Place Butt Plate/Bracket at lowest point of Extruded Backbone and completely tighten. When the Butt Plate is secured, place weapon into vehicle to adjust locks/upper brackets into proper location. Tighten all Screws. (Be Careful Not To Overtighten and Strip The Head of Screw) (Pic 4)

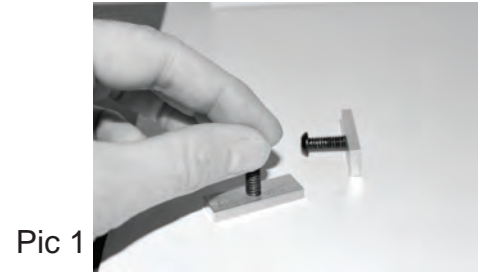

Pic 1



Pic 2



Pic 3



Pic 4

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 3/25

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0132-00

