

THE STASH, TRUNK 2021+ CHEVY TAHOE


Installation Instructions

475-2108






 Unscrew the (2) top DS/PS OEM cargo net hooks, along with the bottom ring hood supports. Tool Required, TP-40 Socket

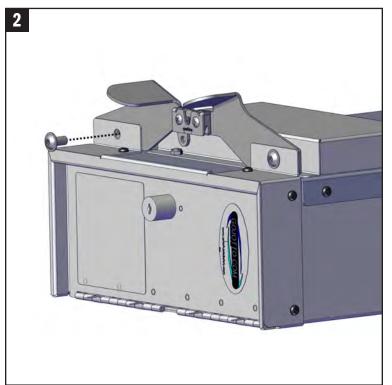

2 Attach the Latch Bracket to "The Stash" Gun Box with provided 5/16"-18 socket head cap screws. **Tool Required 3/16" Torx Socket**




3 Attach the Striker Bracket to the cargo area. Secure the top hole with provided hardware M6-1" socket head cap screw, and the bottom with previously removed screw. Tool Required T-27 Socket Bit

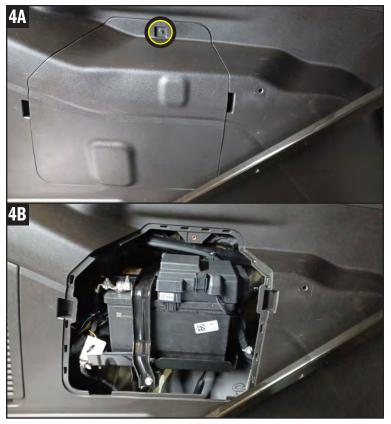


Remove the screw and pop loose to remove the battery cover.


Tool Required 7 MM Socket.

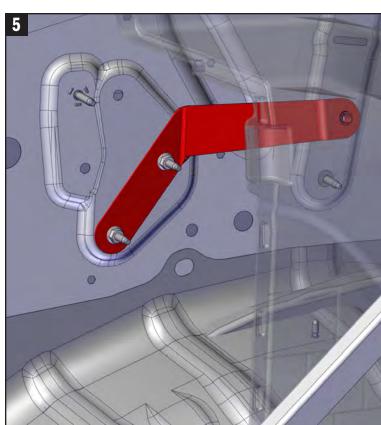

With or without the vehicle's battery removed, place the InnerTrim Bracket on the exposed OE threaded studs and secure with provided (2) M6 nuts. Tool Required 10 MM Socket.

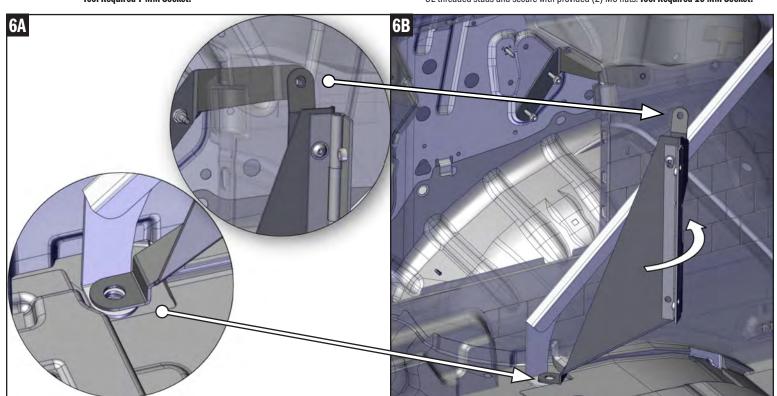


6 Remove the bolt securing the Cargo Barriers Rear Mount Leg, place the Gun Box Bracket on top and loosely attach. Rotate the Gun Box Bracket to the trim aligning the mounting point of the Inner Trim Bracket. Mark a drilling point, rotate the bracket away to drill a ¼" hole.

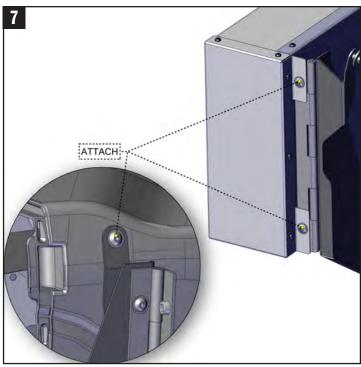

7 Secure the Box Bracket to the InnerTrim Bracket and the Gun Box with provided (4) 5/16"-18 socket head cap screws. Finish by attaching Gun Box to the Box Hinge and Latch Bracket.

GUN BOX WIRING DIAGRAM (HOOKUP HARNESS)

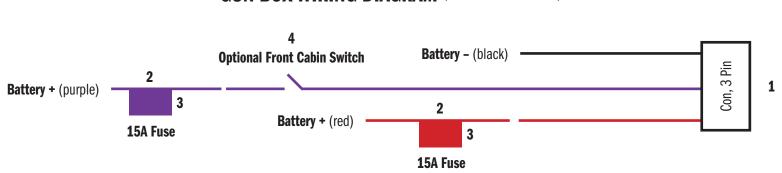

- * Battery connection can be Switched or Constant basted on the desired function. Ignition **ON** or **OFF** function.
 - 1 = 475-2111, Harness, Gun Box, External
 - 2 = 450-0105, Holder, Fuse, In-Line, ATC
 - 3 = 450-0199, Fuse, 15A, ATO-ATC
 - 4 = 475-7208, Momentary Switch

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



