


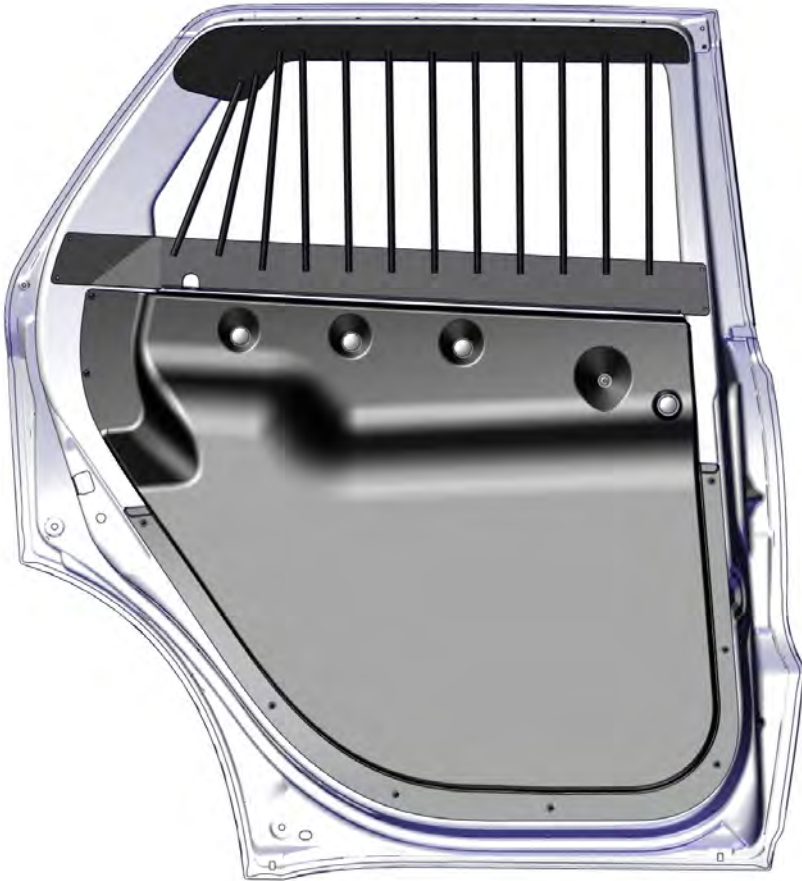

BAR-STYLE WINDOW ARMOR & ABS DOOR PANELS 2019+ DODGE DURANGO

Installation Instructions

425-2145



1. Remove the Latch Cover and Handle Cover to gain access to the OEM hardware. 10 mm Socket / Phillips required.




2. Using a trim removal tool, start from the bottom popping loose the Door Panel loose from the frame structure.



3. Unplug the window switch.



4. Remove the (16) screws from the back side of the door panel, removing the armrest section from the panel. Torx-15 Socket required.

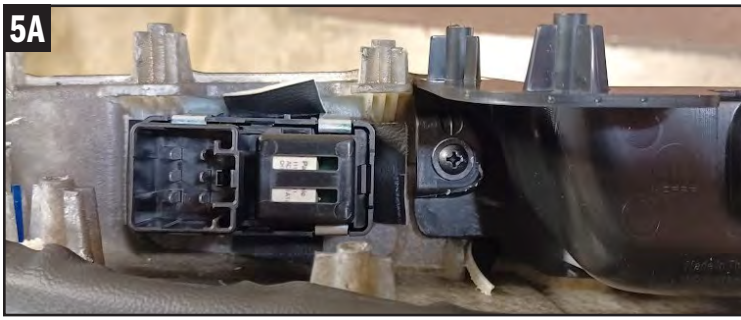

5. Squeeze the tabs while pressing it down to remove the window switch. Once removed secure and tape to the door frame.



6. Remove the (3) speaker screws. 6 mm Socket. Speaker not reused.

ASSEMBLY DOOR PANELS

1. Position the outline of the ABS Door Panel to the shape of the OEM door frame.
2. Use (4) provided plastic Push-In Retainers, (1) M6 Flat Head Cap Screw and (9) Phillips Head Tek Screws to attach ABS Door Panel to OEM door frame mounting points.




Push-In Retainers



Phillips Head Tek Screws



M6 Flat Head Cap Screw

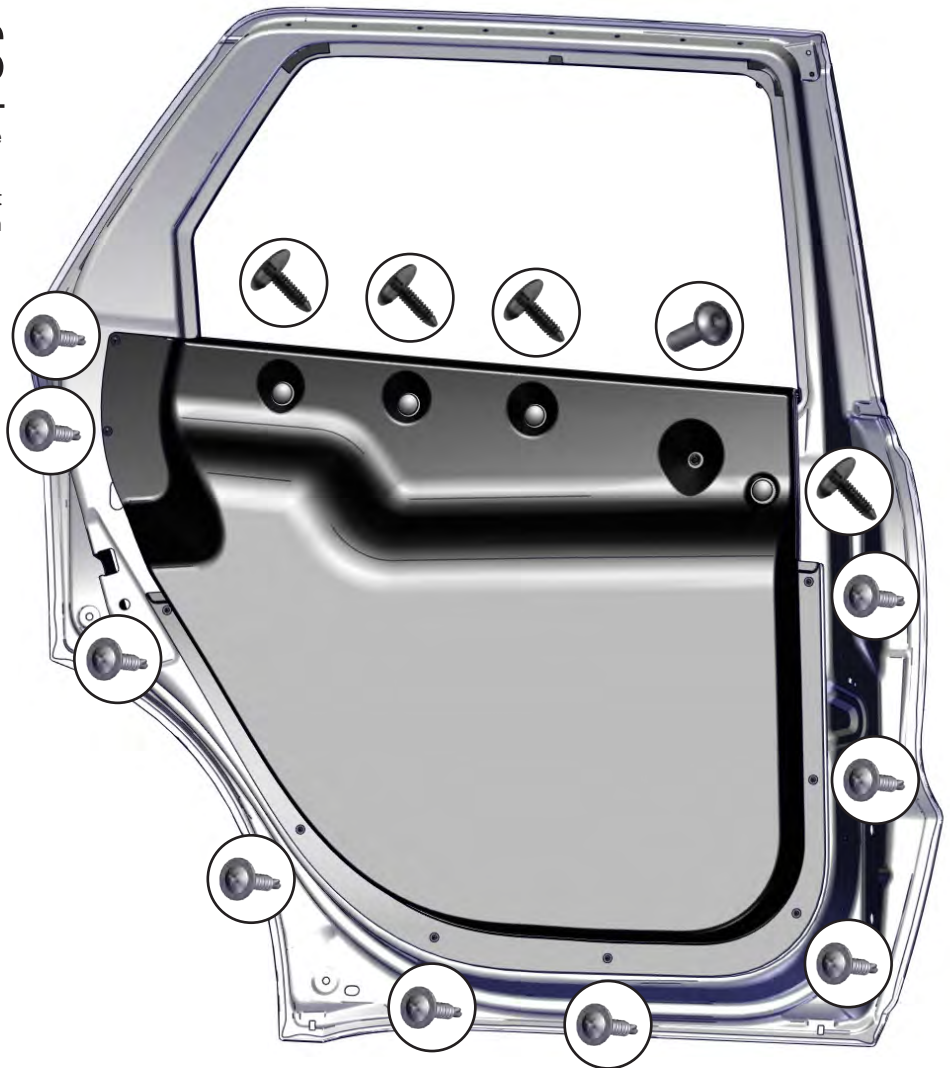



INCLUDES:

- (1) Driver Side Window Armor
- (1) Passenger Side Window Armor

1. Align Window Armor into position following contour of door frame.
2. Secure Window Armor into place using provided (9) tek screws.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 9/24

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0212-00

