



CONTOUR CONSOLE

2025+ CHEVROLET TAHOE WITH LOCKING LID STORAGE

Installation Instructions


425-6735



Recommend removing OEM Driver and Passenger Front Seats for easier installation.

1. GM provides (4) bolt locations in the floor pan of the vehicle to secure the "center seat." If you ordered your vehicle with the center seat - simply remove the center seat and reuse the OEM 12 mm bolts to secure the mounting legs (floor plate or console).

However, if you chose the "seat delete" option when ordering the 2025+ Tahoe, the (4) OEM bolts will not be available, and the (4) bolt locations will be unthreaded arrest welded bungs. Jotto Desk™ provides 1/2"-13 x 1.5" long TCS bolts (4) for securing the mounting legs (floor plate or console). It is recommended that the (4) unthreaded bungs first be drilled out with a 27/64" drill bit, in order to properly size the hole for the 1/2" thread cutting bolts. Then, using a 1/2" Drive Impact (air if available) and cutting oil, drive the TCS bolts into the bungs.

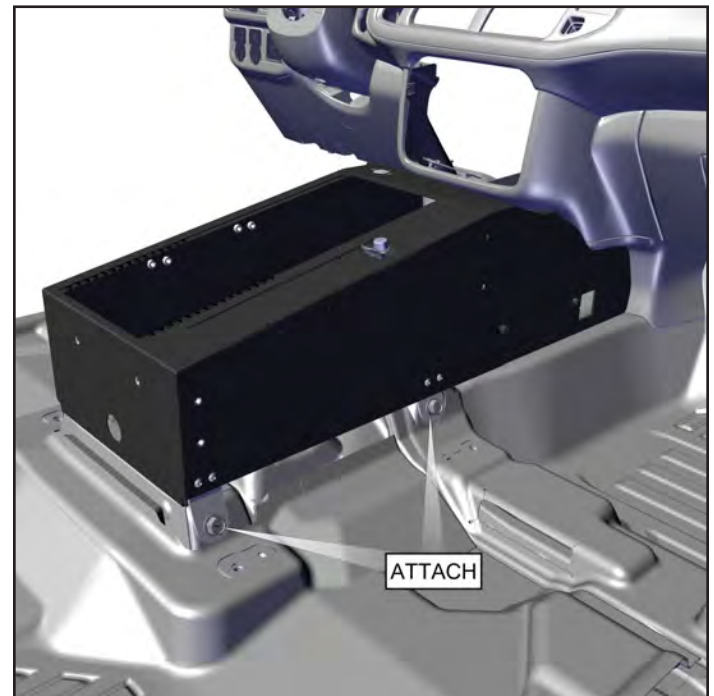

2. Outside of vehicle, loosely attach Rear Legs, Front P/S, and Front D/S Legs with provided hardware. Install Contour Console into the vehicle from the rear seat area, sliding forward until matching up with OEM dash structure. **NOTE: Indicate the correct leg for the passenger front with the cut out "P".**
3. Adjust Mounting Legs as needed - to position over OEM mounting points and tighten legs to Contour Console. Secure Mounting Legs to OEM Substructure using OEM 12 mm bolts or provided 1/2" - 13 x 1.5 TCS Bolts.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 10/24

Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.

050-0222-00

